

GrabTec


Split Grapple Control Kit

GREAT for Moving Round Bales or Mixing Operations



Grabtec Model GA90 on a 3.0 yd bucket


Any Grabtec grapple model can be equipped with the optional Split Control Kit. Just remove the center tooth bar that connects the two grapple "halves". Install the solenoid and hoses on the back of the bucket (all brackets and hardware included) and install the control panel (or handle grip) in the cab.

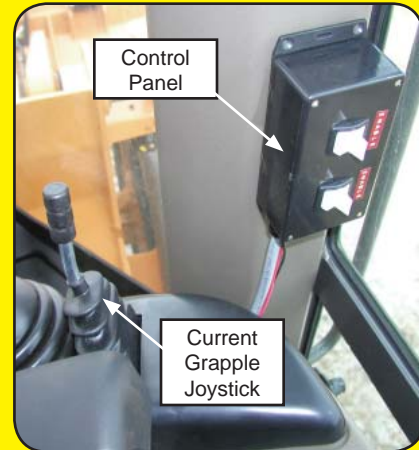

Control Panel

Current Grapple Joystick

Control panel can be mounted in the cab close to your current joystick. There is a white "enable" switch for each grapple half. Simply enable the half you want to use and then operate the joystick for the grapple. Control box measures 6" x 3" x 2" tall. **A handle grip with two enable buttons is also available** instead of the control box. The handle grip can be mounted to your current grapple joystick handle.

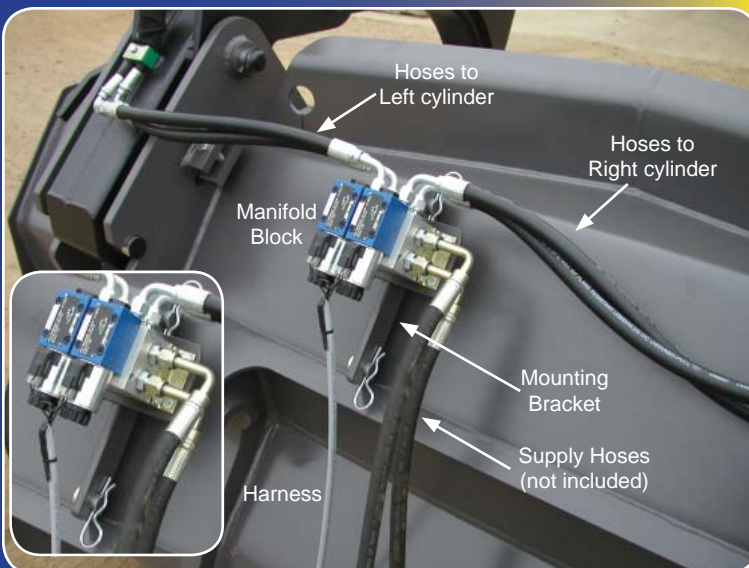

Hoses to Left cylinder

Hoses to Right cylinder

Manifold Block

Mounting Bracket

Supply Hoses (not included)

Harness

KIT INCLUDES

- Solenoid manifold block.
- Mounting Bracket for manifold block.
- Universal bracket that welds onto bucket
- Four hoses to connect manifold to the grapple cylinders.
- Control panel box with switches (or handle grip with 2 buttons)
- Wiring harness with 28 feet of cable. Three feet of cable attached to the manifold block and 25' of cable attached to the control box (or handle grip). Connector plugs on each of these cables allows the cable to be disconnected if the bucket and/or grapple is unhooked from the wheel loader.

GRABTEC INC - www.grabtec.com

Toll Free (888) 857-8952 or (712) 477-2675

Mailing address: 3301 S Grace Ave, Sioux Falls SD 57103

Midwest Install Center: 1242 Arizona Ave, Larchwood IA 51241